



NX-ILM400

NX series IO-Link master IP20, 4 channels

Specifications

I/O system	NX I/O Bus
Type of module	IO-Link master
Number of digital inputs	4
Digital input type	IO-Link, PNP
Permitted voltage at input	20.4-28.8 V
Number of digital outputs	4
Digital output type	IO-Link, PNP
Permitted voltage at output	20.4-28.8 V
Output current	0.1 A
Short-circuit protected outputs	✓
Connection method	3-wire, 4-wire
Signal processing	Free running
IO-Link master	✓
I/O connection type	Push-in
Number of I/O connectors	1
Detachable I/O connector	✓
Suitable for safety functions	✗
SIL according to IEC 61508	None
Communication port(s)	IO-Link
Number of IOV (V+) terminals	0
Number of IOG (V-) terminals	0
Number of COM terminals	0
Degree of protection (IP)	IP20

Product Height (unpacked)	106 mm
Product Width (unpacked)	12 mm
Product Depth (unpacked)	80 mm
Product Weight (unpacked)	67 g

Accessories



NX-AUX02

Terminal block coding pins for 10x NX I/O units (terminal block: 30 pins, unit: 30 pins)

Spare parts



NX-TBA162

Replacement screwless push-in connector with 16 wiring terminals (marked A+B)

Downloads

CAD Library

CJ-series -[EtherNet/IP]- NX-EIC + NX-ILM400 - [IO-Link]- E2E-series Proximity Sensor
Connection Guide

EN PDF 3.71 MB

CJ-series -[EtherNet/IP]- NX-EIC + NX-ILM400 - [IO-Link]- E3Z-series Photoelectric Sensor
Connection Guide

EN PDF 3.29 MB

CJ-series -[EtherNet/IP]- NX-EIC + NX-ILM400 - [IO-Link]- Turck I/O Hub (TBIL)
Connection Guide

EN PDF 3.89 MB

CJ-series -[EtherNet/IP]- NX-EIC + NX-ILM400 - [IO-Link]- MTS Sensors (E-Series)
Connection Guide

EN PDF 3.93 MB

EAC Mark removal Discontinuation Notice

EN PDF 221 KB

IO-Link Series Brochure

EN PDF 7.5 MB



IO-Link System Users Manual

EN PDF 9.22 MB



Machine Safety Solution Brochure

EN PDF 2.86 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- E2E-series Proximity Sensor

Connection Guide

EN PDF 2.44 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- E3Z-series Photoelectric Sensor

Connection Guide

EN PDF 2.5 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO SFAW- series W Flow Sensor

Connection Guide

EN PDF 2.62 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO SPAE- Pressure Sensor

Connection Guide

EN PDF 2.42 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO VPPM- series

Connection Guide

EN PDF 2.35 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- Piab AB Vac.Ejector piCOMPACT23

Connection Guide

EN PDF 2.68 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- Turck I/O Hub (TBIL)

Connection Guide

EN PDF 2.76 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD Sensor (PPX series)

Connection Guide

EN PDF 2.43 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD Sensor (WFC series)

Connection Guide

EN PDF 2.75 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD WFK2 Flow sensor

Connection Guide

EN PDF 2.09 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- MTS Sensors (E-Series)

Connection Guide

EN PDF 2.4 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- PATLITE Beacon (NE-IL)

Connection Guide

EN PDF 2.02 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- PATLITE Tower (LR6-IL)

Connection Guide

EN PDF 2.08 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC (ISA3-xxx)

Connection Guide

EN PDF 2.61 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC (xSE20Bx-L(-M/-P)- x)

Connection Guide

EN PDF 2.13 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC ITVx000/-IO*

Connection Guide

EN PDF 1.89 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC Servo 24VDC (JXCL1)

Connection Guide

EN PDF 2.23 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- Schmalz Ejector (SCPSi)

Connection Guide

EN PDF 2.4 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (O5D10x/O5D15x)

Connection Guide

EN PDF 2.42 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (PN7x94)

Connection Guide

 
EN PDF 2.72 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (TN24xx)

Connection Guide

EN PDF 2.74 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm TR7439 Pt100/1000

Connection Guide

EN PDF 2.43 MB



NX-HAD

Brochure

EN PDF 1.22 MB



NX-HTC/NX-TC/EJ1/E5DC-B Temperature control units

Flyer

EN PDF 3.28 MB



NX-ILM400 NX-series IO-Link Master Unit

Datasheet

EN PDF 2.31 MB



NX-series

Reference Manual

EN PDF 1.45 MB



NX-series I/O system

Brochure

EN PDF 8.37 MB



NX-series IO-Link Master Unit

Users Manual

EN PDF 5.96 MB



NX1-series + NX-ILM400 -[IO-Link]- SMC D-MP# Actuator Position Sensor

Connection Guide

EN PDF 1.88 MB



NX1-series + NX-ILM400 -[IO-Link]- SMC Digital Flow Switch

Connection Guide

EN PDF 2.58 MB



Omron NX-ECC20x

EtherCAT ESI file

EN ZIP 1.51 MB



Sysmac

Catalogue

EN PDF 43.5 MB



Sysmac: A Fully Integrated Platform

Brochure

EN PDF 19.1 MB