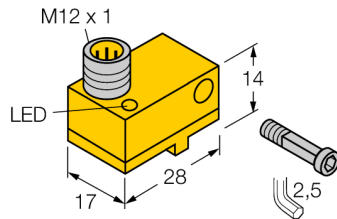
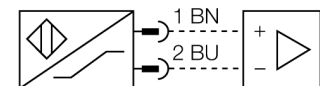


**Magnetic field sensor  
for pneumatic cylinders  
BIM-NST-Y1X-H1141**



- ATEX category II 2 G, Ex zone 1
- ATEX category II 1 D, Ex zone 20
- SIL2 as per IEC 61508
- Rectangular, height 6mm
- Plastic, PA12-GF30
- Magnetic-inductive sensor
- DC 2-wire, nom. 8.2 VDC
- Output acc. to DIN EN 60947-5-6 (NAMUR)
- Male connector M12 x 1

**Wiring diagram**



**Functional principle**

Magnetic field sensors are activated by magnetic fields and are especially suited for piston position detection in pneumatic cylinders. Based on the fact that magnetic fields can permeate non-magnetizable metals, it is possible to detect a permanent magnet attached to the piston through the aluminium wall of the cylinder.

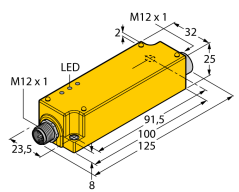
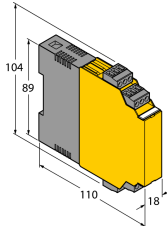


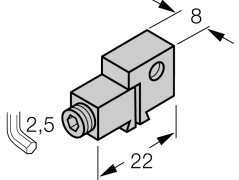

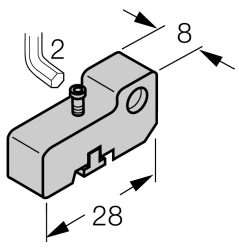

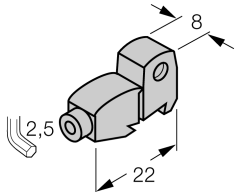
|   |  |
|---|--|
| <b>Type code</b>  | BIM-NST-Y1X-H1141  |
| Ident no.   | 1058600  |
| <b>Pass speed</b>   | ≤ 10 m/s   |
| Repeatability   | ≥ ± 0.1 mm   |
| Temperature drift   | ≤ 0.1 mm   |
| Hysteresis  | ≤ 1 mm   |
| Ambient temperature   | -25...+70 °C   |
| <b>Output function</b>  | 2-wire, NAMUR  |
| Switching frequency   | 1 kHz  |
| Voltage   | Nom. 8.2 VDC   |
| Non-actuated current consumption                                      | ≤ 1.2 mA   |
| Actuated current consumption  | ≥ 2.1 mA   |
| <b>Approval acc. to</b>   | KEMA 02 ATEX 1090X   |
| Internal capacitance (C <sub>i</sub> ) / inductance (L <sub>i</sub> ) | 150 nF / 150 µH  |
| Device designation  | Ⓔ II 2 G Ex ia IIC T6 Gb / II 1 D Ex ia IIIC T95 °C<br>Da<br>(max. U <sub>i</sub> = 20 V, I <sub>i</sub> = 60 mA, P <sub>i</sub> = 130 mW) |
| <b>Design</b>   | rectangular, NST   |
| Dimensions  | 28 x 17 x 14 mm  |
| Housing material  | plastic, PA  |
| Material active area  | Plastic, PA  |
| Connection  | male, M12 x 1  |
| Vibration resistance  | 55 Hz (1 mm)   |
| Shock resistance  | 30 g (11 ms)   |
| Protection class  | IP67   |
| MTTF  | 6198 years acc. to SN 29500 (Ed. 99) 40 °C   |
| Mounting on the following profiles                                    | .  |
| Cylindrical design  |  |
| <b>Switching state</b>  | LED yellow   |
| Included in scope of supply   | 1 x screw M3x20, 1 x tension bolt, 1 x spring washer   |

**Magnetic field sensor  
for pneumatic cylinders  
BIM-NST-Y1X-H1141**

**TURCK**

Industrial  
Automation

**Accessories**


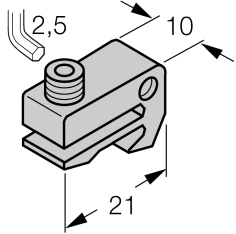
| Type code             | Ident no. | Description   | Dimension drawing   |
|-----------------------|-----------|---|---|
| IMC-Di-22Ex-PNO/24VDC | 7560003   | Zweikanaliger Trennschaltverstärker mit M12-Steckverbinder, dezentral einsetzbar, IP67, Zone 2/22 installierbar, Eingangskreise II(1) Ex ia, PNP-Transistorausgang NO   |    |
| IM1-22EX-R            | 7541231   | Isolating switching amplifier, dual-channel; 2 relay outputs NO; input NAMUR signal; selectable ON/OFF mode for wire-break and short-circuit monitoring; adjustable signal flow (NO/ NC mode); removable terminal blocks; 18 mm width; universal voltage supply unit                            |    |
| KLN 3 KLEMMSTÜCK      | 6970504   | Mounting on  Dovetail groove cylinders or  T-groove cylinders; clamping width 5.2...13.5 mm; material: Anodized aluminium |  |
| KLN-SMC KLEMMSTÜCK    | 6970503   | Mounting on  SMC cylinders; clamping width 4 mm; material: Anodized aluminium  |  |
| KLF 1 KLEMMSTÜCK      | 6970401   | Mounting on  external dovetail grooves; for all cylinder diameters, material: Anodized aluminium   |  |

**Magnetic field sensor  
for pneumatic cylinders  
BIM-NST-Y1X-H1141**

**TURCK**

Industrial  
Automation

**Accessories**

| Type code        | Ident no. | Description   | Dimension drawing   |
|------------------|-----------|---|---|
| KLF 2 KLEMMSTÜCK | 6970402   | Mounting on  external dovetail grooves (IMI Norgrem); for all cylinder diameters, material: Anodized aluminium |  |

# Magnetic field sensor for pneumatic cylinders BIM-NST-Y1X-H1141

**TURCK**

Industrial  
Automation

## Operating manual

### Intended use

This device fulfills the directive 94/9/EC and is suited for use in explosion hazardous areas according to EN60079-0:2012, -11:2012, -26:2007. Further it is suited for use in safety-related systems, including SIL2 as per IEC 61508.

In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

### For use in explosion hazardous areas conform to classification

II 2 G and II 1 D (Group II, Category 2 G, electrical equipment for gaseous atmospheres and category 1 D, electrical equipment for dust atmospheres).

### Marking (see device or technical data sheet)

⊕ II 2 G acc. to Ex ia IIC T6 Gb acc. to EN60079-0 and -26 und ⊕ II 1 D Ex ia IIIC T95°C Da acc. to EN60079-0

### Local admissible ambient temperature

-25...+70 °C

### Installation / Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas. Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is only suited for connection to approved Exi circuits compliant to EN60079-0 and -11. Please observe the maximum admissible electrical values.

After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).

When employed in safety systems to IEC 51408 it is required to assess the failure probability (PFD) of the complete circuitry.

### Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device.

If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields.

The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet.

In order to avoid contamination of the device, please remove possible blanking plugs of the cable glands or connectors only shortly before inserting the cable or opening the cable socket.

### service / maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.