Model Number

BVS58

Features

- **Industrial standard housing Ø58 mm**
- **13 Bit singleturn**
- **Output code: gray and binary**
- **Transfer of position data with 4 AS-Interface slaves**
- **Parameterization and addressing via AS-Interface**
- **Servo or clamping flange**

Description

In modern machines and systems, binary sensors and actuators are connected together via AS-Interface.

Until now it was necessary to go back to the use of costly conventional wiring when wanting to use absolute encoders. The reason for this was that the handshake mode with the control module of the analogue profile proved to be too slow for positioning tasks.

In order to meet the real-time demands of many applications, a multi-slave solution using the BVS58 AS-Interface rotary encoders was created. The position value of 13 Bits in length is transferred within a single cycle via the 4 integrated AS-Interface chips to the master and made available to the PLC.

This singleturn absolute encoder is available either in clamping flange design with a shaft 10 mm in diameter x 20 mm or in servo flange design with a shaft 6 mm in diameter x 10 mm.

Technical data

| General specifications	
Detection type	photoelectric sampling
Device type	Singleturn absolute encoder
Electrical specifications	
Operating voltage U_B	29.5 ... 31.6 V DC
No-load supply current I_0	max. starting current 155 mA , operating current max. 85 mA
Linearity	± 1 LSB
Output code	programmable, Gray code, binary code
Code course (counting direction)	programmable, cw ascending (clockwise rotation, code course ascending) cw descending (clockwise rotation, code course descending)
Interface	
Interface type	AS-Interface
Resolution	
Single turn	13 Bit
Overall resolution	13 Bit
Transfer rate	max. 0.167 MBit/s
Standard conformity	AS-Interface
Connection	
Connector	type V1, M12, 4-pin
Standard conformity	
Degree of protection	DIN EN 60529, IP65
Climatic testing	DIN EN 60068-2-3, no moisture condensation
Emitted interference	EN 61000-6-4:2007
Noise immunity	EN 61000-6-2:2005
Shock resistance	DIN EN 60068-2-27, 100 g, 11 ms
Vibration resistance	DIN EN 60068-2-6, 10 g, 10 ... 2000 Hz
Ambient conditions	
Operating temperature	-20 ... 70 °C (-4 ... 158 °F)
Storage temperature	-25 ... 85 °C (-13 ... 185 °F)
Mechanical specifications	
Material	housing: powder coated aluminum flange: aluminum shaft: stainless steel
Mass	approx. 330 g
Rotational speed	max. 10000 min^{-1}
Moment of inertia	30 gcm^2
Starting torque	≤ 2 Ncm
Shaft load	
Axial	40 N at max. 6000 min^{-1} 10 N at max. 12000 min^{-1}
Radial	60 N at max. 6000 min^{-1} 20 N at max. 12000 min^{-1}

t37283_eng.xml

PEPPERL+FUCHS   **1**

Dimensions

Camping flange

Servo flange
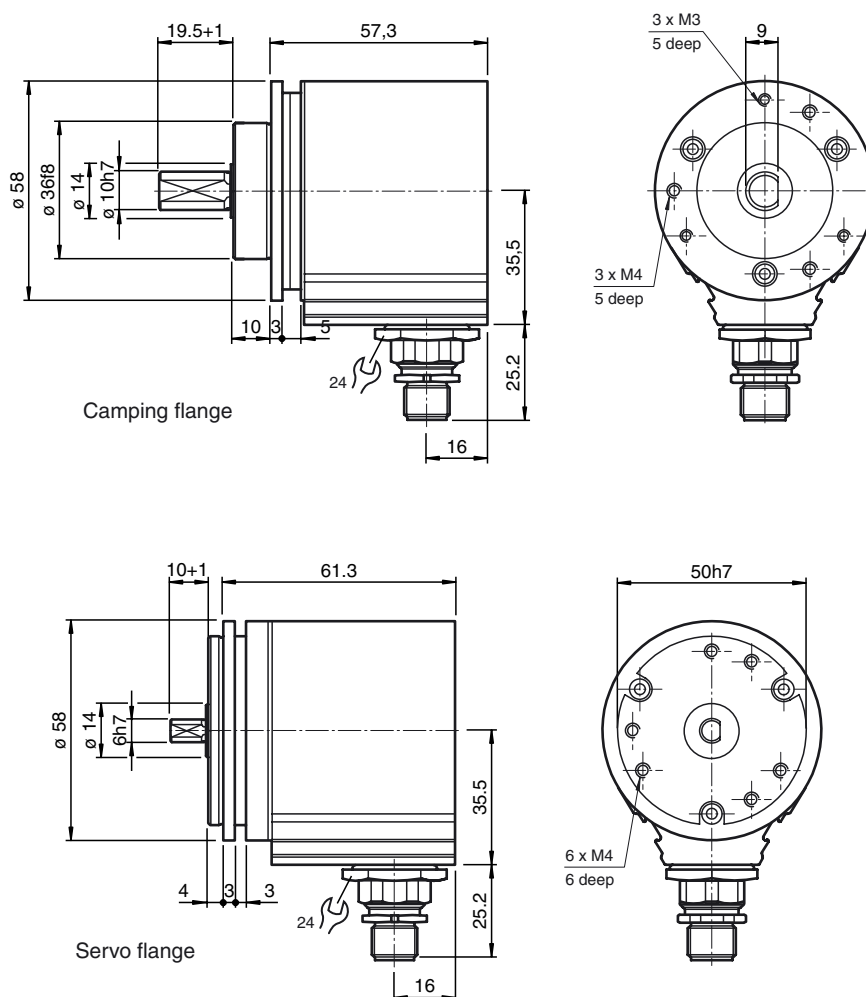
Electrical connection

Signal	V1 connector, 4-pin	Explanation
AS-Interface +	1	
Reserved	2	Not wired
AS-Interface -	3	
Reserved	4	Not wired

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Addresses

	Slave A	Slave B	Slave C	Slave D
Preset address	1	2	3	4
IO code	7	0	0	0
ID code	F	F	F	F

⚠ When readdressing by means of a bus master or a programming device, it is absolutely essential to assign different addresses to the four integrated AS-Interface chips.

Parameter bits

The four parameter bits of slave A are used to set the parameters of the rotary encoder.
The parameter bits of slave B, C and D are not used.

Status of parameter bit	Slave A			
	P0	P1	P2	P3
0	Gray code	Transfer with flag bits	Descending counting direction for clockwise rotation	Not used
1	Binary code	Transfer without flag bits	Ascending counting direction for clockwise rotation	Not used

Data bits

From the AS-Interface master to the rotary encoder

Data from the AS-Interface master are transferred to the rotary encoder via slave A, which works bidirectionally. Slaves B, C and D work unidirectionally, i.e. they are incapable of receiving data.

Status of D0/D1 or D2/D3	Slave A	
	D0/D1	D2/D3
00	Normal mode	Position data are not saved!
01	Rotary encoder is set to ¼ of the singleturn resolution.	Position data are saved!
10	Rotary encoder is set to 0.	Position data are saved!
11	Normal mode	Position data are not saved!

When a change is made in data bits D2 and D3 from 01 to 10 or vice-versa, position data are resaved in the rotary encoder.

From the rotary encoder to the AS-Interface master

Depending on the value of parameter bit P1 of slave A, data transfer to the AS-Interface master takes place with or without flag bits.
P1 = 1: Transfer without flag bits

Slave A				Slave B				Slave C				Slave D			
D0	D1	D2	D3	D0	D1	D2	D3	D0	D1	D2	D3	D0	D1	D2	D3
Bit 0	Bit 1	Bit 2	Bit 3	Bit 4	Bit 5	Bit 6	Bit 7	Bit 8	Bit 9	Bit 10	Bit 11	Bit 12	Not used!		

P1 = 0: Transfer with flag bits MA, MB, MC, MD

Slave A				Slave B				Slave C				Slave D			
D0	D1	D2	D3	D0	D1	D2	D3	D0	D1	D2	D3	D0	D1	D2	D3
Bit 0	Bit 1	Bit 2	MA	Bit 3	Bit 4	Bit 5	MB	Bit 6	Bit 7	Bit 8	MC	Bit 9	Bit 10	Bit 11	MD

Operating modes

Address assignments for the four slaves

The AS-Interface master accesses all slaves one after the other within an AS-Interface cycle in order to transfer output data to slave A or to read in input data from the slaves. The singleturn absolute encoder uses only four AS-Interface chips to transfer the position data that are 13 bits wide, i. e. four slave addresses are assigned.

Since these four slaves are queried one after the other, the data may originate from any one of four different sampling times. To minimise the influence of this effect, sequential addresses (n, n+1, n+2 and n+3) should be assigned to slaves A, B, C and D.

Furthermore, it should be noted that slave A is responsible for controlling the functions of the absolute encoder. If the order of the slaves is changed (D = n, C = n+1, B = n+2, A = n+3), the output word, which is supposed to be transmitted by the function control module of the absolute encoder, will not be transmitted until slaves D, C and B have been read in.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group | USA: +1 330 486 0001 | Germany: +49 621 776 1111 | Singapore: +65 6779 9091 | **PEPPERL+FUCHS** | **3**
www.pepperl-fuchs.com | fa-info@us.pepperl-fuchs.com | fa-info@de.pepperl-fuchs.com | fa-info@sg.pepperl-fuchs.com

A memory command would thus only take effect for slave A. The command would not take effect for slaves that were already read until the next read cycle. Data consistency would be lost because of the change of order.

Temporary storage and transfer with flag bits

If individual telegrams of the four slaves to the AS-Interface master suffer interference, it may happen in spite of temporary storage in the rotary encoder that the data that are transferred to the control module do not all originate from the same position data set.

Transferring one flag bit for each slave makes it possible for the control module to check which position data set an individual data set belongs to by comparing the four flag bits. Data bit D2 is used for this purpose.

Example:

Cycle	Slave A Data bit D2	Position data			
		Slave A	Slave B	Slave C	Slave D
1	0	XXX0	XXX0	XXX0	XXX0
2	1	XXX1	XXX1	XXX1	XXX1
3	0	XXX0	XXX0	XXX0	XXX0
4	1	XXX1	XXX1	XXX1	XXX1
etc.					

Bit D2 is influenced by the control module. Bit 4 of the input data corresponds to the value of this bit for each slave.

D2 is set to 0 in cycle 1. If the value of bit 4 of a slave were "1", that value would be derived from another cycle. This is a simple way to recognise data consistency.

Transferring the flag bits, however, reduces the usable position data from 13 bits to 12. Masking out the fourth bit of each slave increases slightly the effort of putting together the position data set in the control module.

Order code

Bit combinations (resolution)
Multiturn encoder   (see table)
Singleturn encoder   0016
(16 bit = 65536)

Option 2
N   Not expanded

Output code
N   Selectable, binary/Gray

Option 1
0   No option

Exit position
R   Radial

Connection type
AV   Plug connector M12 x 1, 4-pin

Shaft dimension/flange version
011   Shaft Ø10 mm x 20 mm with clamping flange
032   Shaft Ø6 mm x 10 mm with servo flange

Housing material
N   Aluminium, powder coated

Principle of operation
M   Multiturn
S   Singleturn

Shaft version
V   Solid shaft

Data format
B   AS-Interface

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Singapore: +65 6779 9091
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS