

Type code B1N360V-Q20L60-2LU3-H1151
Ident no. 1534069


Measuring range 0...360°
Repeatability $\leq 0.2\%$ of measuring range |A - B|
Temperature coefficient typical $0.03\text{ }^{\circ}\text{K}$
Resolution $\leq 0.14\text{ }^{\circ}$
Ambient temperature -30...+70 °C

Operating voltage 10...30VDC
Rated insulation voltage $\leq 0.5\text{ kV}$
Short-circuit protection yes
Wire breakage / Reverse polarity protection yes/ complete
Output function 5-wire, analog output
Voltage output 0.1...4.9V
Load resistance voltage output 2 outputs, one for CW and one for CCW
Response time $\geq 40\text{ k}\Omega$
Time for the output signal to reach 90% of the adjusted measuring range 0.1 s
Current consumption Time for the output signal to reach 90% of the adjusted measuring range

Design rectangular, Q20L60
Dimensions 60 x 30 x 20 mm
Housing material plastic, PC
Connection male, M12 x 1
Vibration resistance 55 Hz (1 mm)
Shock resistance 30 g (11 ms)
Protection class IP68 / IP69K
MTTF 203 years acc. to SN 29500 (Ed. 99) 40 °C

- Rectangular, plastic, PC
- Compact housing
- Connection via M12x1 plug connectors
- 12 bit resolution
- 5-wire, 10...30 VDC
- 0.1 ... 4.9 V analog output for clockwise (CW) rotation
- 0.1 ... 4.9 V analog output for counter-clockwise (CCW) rotation

Wiring diagram

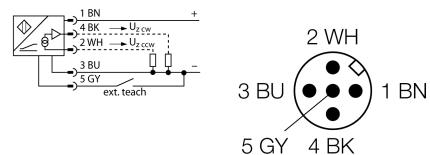



Functional principle

The TURCK inclinometers incorporate a micromechanical pendulum, operating on the principle of MEMS technology (Mikro Elektro Mechanic Systems).

The pendulum basically consists of two 'plate' electrodes arranged in parallel with a dielectric placed in the middle. When the sensor is inclined, the dielectric in the middle moves, causing the capacitance ratio between both electrodes to change.

The downstream electronics evaluates this change in capacitance and generates a corresponding output signal.

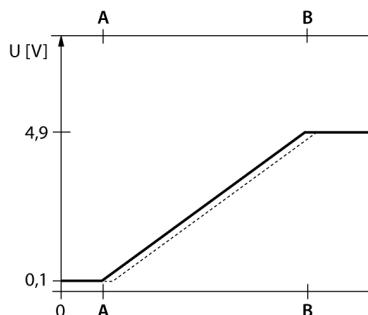

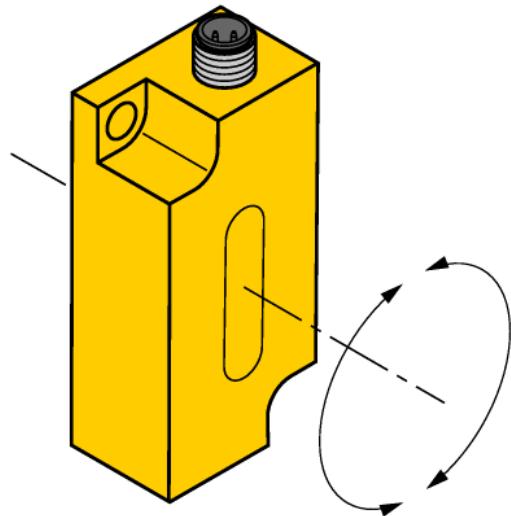Inclinometer**B1N360V-Q20L60-2LU3-H1151****Mounting instructions / Description****Tilt angle**

Adjusting the measuring range via TX1-Q20L60 teach adapter

Setting the angular range in CW direction:

- Move sensor to start position
- Press and hold Teach-Gnd until the output is set to < 4 mA / 0,1 V (approx. 1 s)
- Move sensor to end position
- Press and hold Teach-Gnd until the output is set to 20 mA / 4.9 V (approx. 3 s)

Resetting the angular range:

- Press and hold Teach-Gnd until the output is set to 12 mA (approx. 6 s)
- The angular range is reset to 360°.

Inclinometer**B1N360V-Q20L60-2LU3-H1151****Accessories**

Type code	Ident no.	Description	Dimension drawing
IM43-13-SR	7540041	Limit value monitor; 1-channel; input 0/4...20 mA or 0/2...10 V; supply of 2- or 3-wire transmitters/sensors; limit value adjustment via teach button; three relay outputs with one NO contact each; removable terminal blocks; 27 mm wide; universal voltage supply 20...250 VUC; further limit value monitors are described in our "Interface Technology" catalog.	
TX1-Q20L60	6967114	Teach adapter for inductive encoders, linear position, angle and ultrasonic sensors	
SG-Q20L60	6901100	Protective frame for Q20L60; protects against mechanical impact; stainless steel	